OLIN®
Live Now

In Car Dual Screen
DVD PLAYER
PD-7755

USER MANUAL

SAFETY PRECAUTION

Thank you for choosing our portable DVD player. It includes a 7" wide screen and a DVD player. The unit applies the latest state of art electronics and is designed for use at home, in hotels and in offices etc for relaxation. The compact size makes carrying easier as well as installation. Please read the manual carefully prior to use and keep it well for later consultation.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
2) Do not use this unit near water. Do not place over the unit any container with liquid inside.
3) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4) Unplug this unit during lightning storms or when unused for long time.
5) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
6) Only use accessories specified by the manufacturer.
7) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
8) Do not use irregular shaped discs such as heart or star-shaped discs as they may Cause the unit to malfunction.
9) Please ensure enough clearance around the receiver for good ventilation. Any objects and the appliance should be at least 10 cm apart.
10) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc…
11) No naked flame source, such as lighted candles, should be placed on the apparatus
12) Attention should be drawn to the environmental aspects of battery disposal.
13) CAUTION : Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
14) The disconnect devices shall remain readily operable.
15) Only used with the provided adaptor model no.: FM090010-C.

TABLE OF CONTENTS

SAFETY PRECAUTION 1
TABLE OF CONTENTS 2
PACKAGE CONTENTS/MAIN FEATURES 3
- Package contents 3
- Main Features 3

ABOUT OPTICAL DISCS 4
- Disc Requirements 4
- Disc Care and Maintenance 4

MAIN UNIT 5
SLAVE SCREEN 6
SYSTEM CONNECTION 7
- Powering and installation 7
- Connecting to the Slave screen 8
- Audio and Video Signal Output 9

REMOTE CONTROL 10
- The Use of Remote Control 11

BASIC OPERATION 12
- Fast forward and fast backward 13
- Repeat playing 13
- Repeat playing of favorite scene 14
- Angle 14
- Zoom In/ Out 15

PLAYING JPG /MP3 FILE 16
- Playing JPG file 16
- Playing MP3 files 16

SYSTEM SETUP 17
- General Setup Page 17
- Video Setup Page 18
- Password Setup Page 18
- Preference Page 18

SPECIFICATION 20
BATTERY 21
- Rechargeable Battery Use 21
- Precautions related to Battery Recharge 21
- Using and maintaining rechargeable battery supply 21

MOUNTING BAG 22
TROUBLESHOOTING 23

PACKAGE CONTENTS/MAIN FEATURES

Package contents

Please make sure the following items are included in the package. If any item is missing, contact your dealer.

7 '' Slave screen & DVD Player	1
Remote Control with battery	1
Audio/Video Cable	1
AC/DC Power Adapter	1
Cigarette Lighter Adapter	1
User Manual	1
Headphone	2
DC+Audio/Video Cable	1
Mounting Bag	2
Quick guide	1
Warranty card	1

Main Features

- High brightness color 7” LCD screen
- Compatible with disc of DVD, VCD, MP3, CD, JPEG, etc.
- Built-in stereo speakers
- Built-in rechargeable Lithium polymer battery
- Support PAL or NTSC system
- Support English OSD, speed forward/backward, repeat function
- Zoom in/out function

ABOUT OPTICAL DISCS

Disc Requirements

This player supports the following discs.

Type	Disc Mark	Content Type	Disc Size	Max. Playback Time
DVD-Video Discs	DVD VIDEO	Audio + Video (moving picture)	12 cm	133 min (SS-SL)
				242 min (SS-DL)
				266 min (DS-SL)
				484 min (DS-DL)
Audio Compact Discs (CDs)	COMPACT DISC DIGITAL AUDIO	Audio	12 cm	74 min
JPEG CDs	--	Still Picture	12 cm	--

This unit can play back CD-R and CD-RW discs that contain JPEG picture files. Discs not listed above are not supported by this unit (eg, PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)

Disc Care and Maintenance

Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.

Handling a Disc

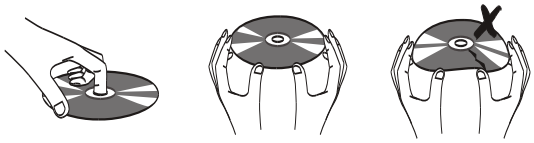

Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc. To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.

Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures.

Do not bend or press discs.

To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.

Do not place stickers or labels on either side of a disc.

Cleaning a Disc

Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.

Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

Note: Do not attempt to remove a disc until it completely stopped.

MAIN UNIT

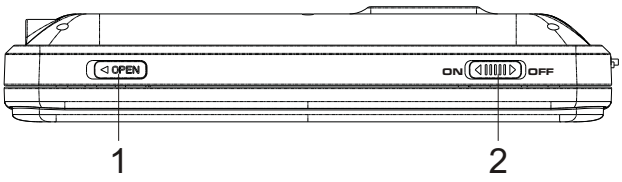

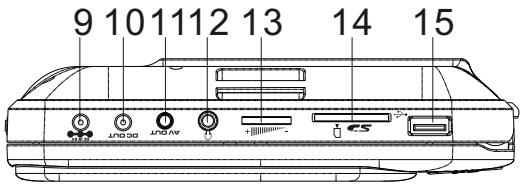

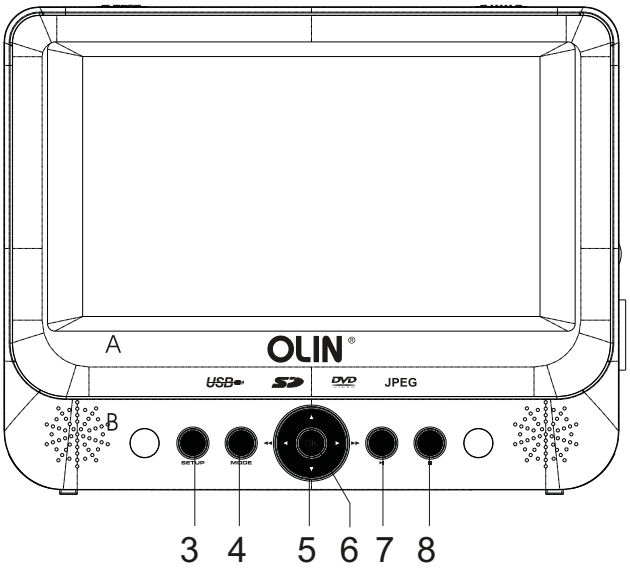

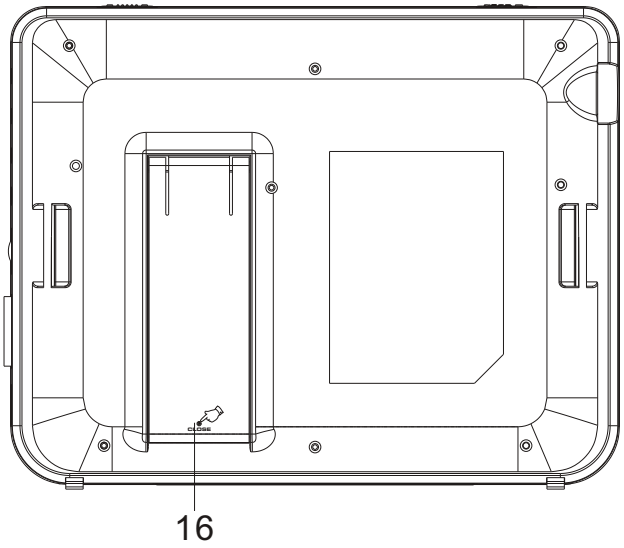

1. Open Knob
   Switch the knob to unlock the disc cover
2. Power ON/OFF Switch
   Switch the DVD player on/off
3. SETUP Button
   Press SETUP to display the system setup menu
4. MODE Button
   Press MODE to select the source between DVD and Media
5. Navigation Buttons
6. OK Button
   Press OK to confirm selection
7. PLAY/PAUSE Button
   Press Play/Pause to start/hold playback
8. STOP Button
   Press STOP to stop playback
9. DC IN 9V
   Connect to the power outlet
10. DC OUT
    Connect to Slave screen DC IN
11. AV OUT
    Output audio/ video Signals
12. Headphone Jack
13. Volume Knob
    Turn the volume up/ down
14. SD Card Slot
15. USB Port
16. Bracket

SLAVE SCREEN

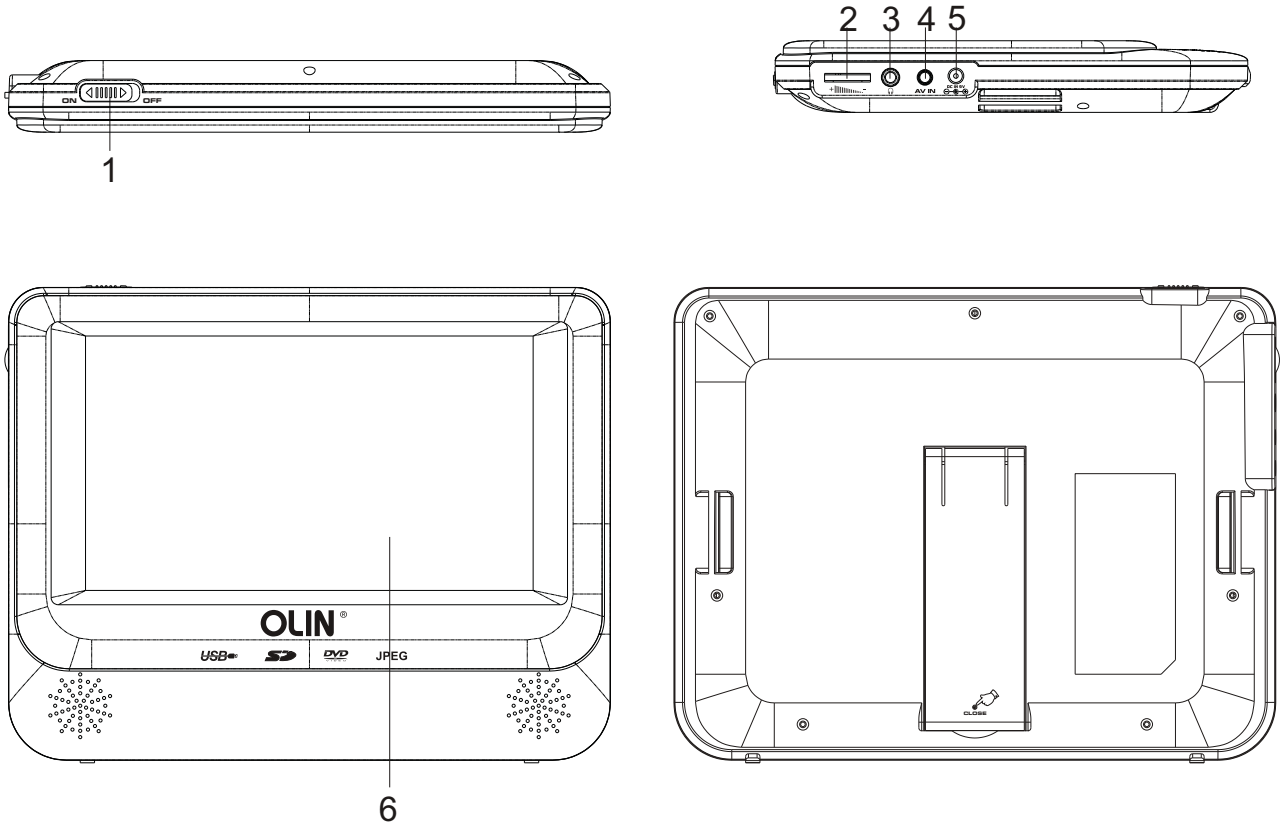

1.Power ON/OFF

Switch the Slave screen on/off

2.Volume Knob

Turn the volume up/down

3.Headphone Jack

4.AV IN

Input audio/ video signals

5.DC IN 9V

Connect to the DVD player DC OUT or the power outlet

6.Slave screen

SYSTEM CONNECTION

Powering and installation

Plug one end of the AC/DC power adaptor into the DC IN 9V jack on the right of the main unit, then plug the other end into the AC power receptacle. Please refer to the following illustration

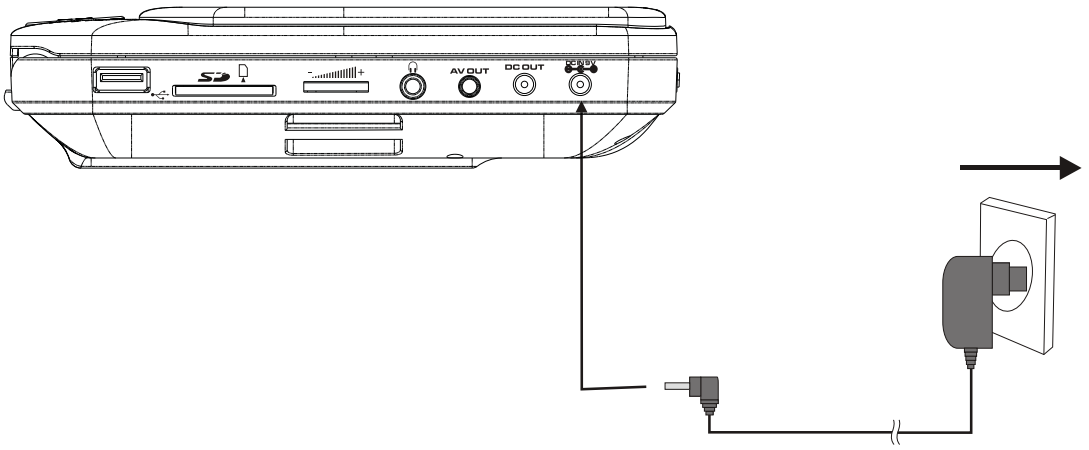

If using car cigarette lighter adaptor to connect to the power:
Plug one end of the cigarette lighter adaptor into the DC IN 9V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

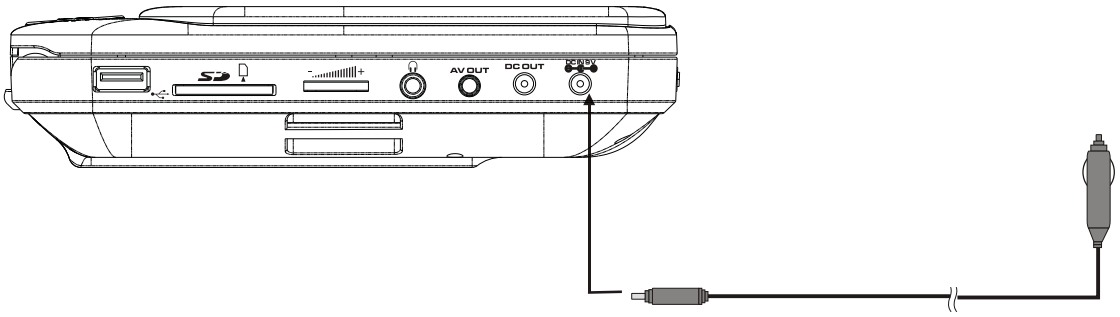

Notice:

Car cigarette lighter adaptor can't be used to recharge the battery.

Warning:

This model and its enclosed car adaptor are only compatible with 9~12V vehicles.
It is not compatible with 24v vehicles.

Please note:

Do not connect the unit to the car via car adaptor before the engine has been started.
Disconnect the car adaptor when it is not in use.

SYSTEM CONNECTION

Connecting to the Slave screen

The Main Unit can be connected to the Slave screen.
Connect the Main Unit to power outlet via AC/DC adaptor or cigarette lighter adaptor.
Then connect Main Unit's DC Out jack to Slave screen's DC IN 9V jack with a DC/AV cable.
Also use the DC/AV cable to connect Main Unit's AV OUT to Slave screen's AV IN.
Please refer to the illustration below.

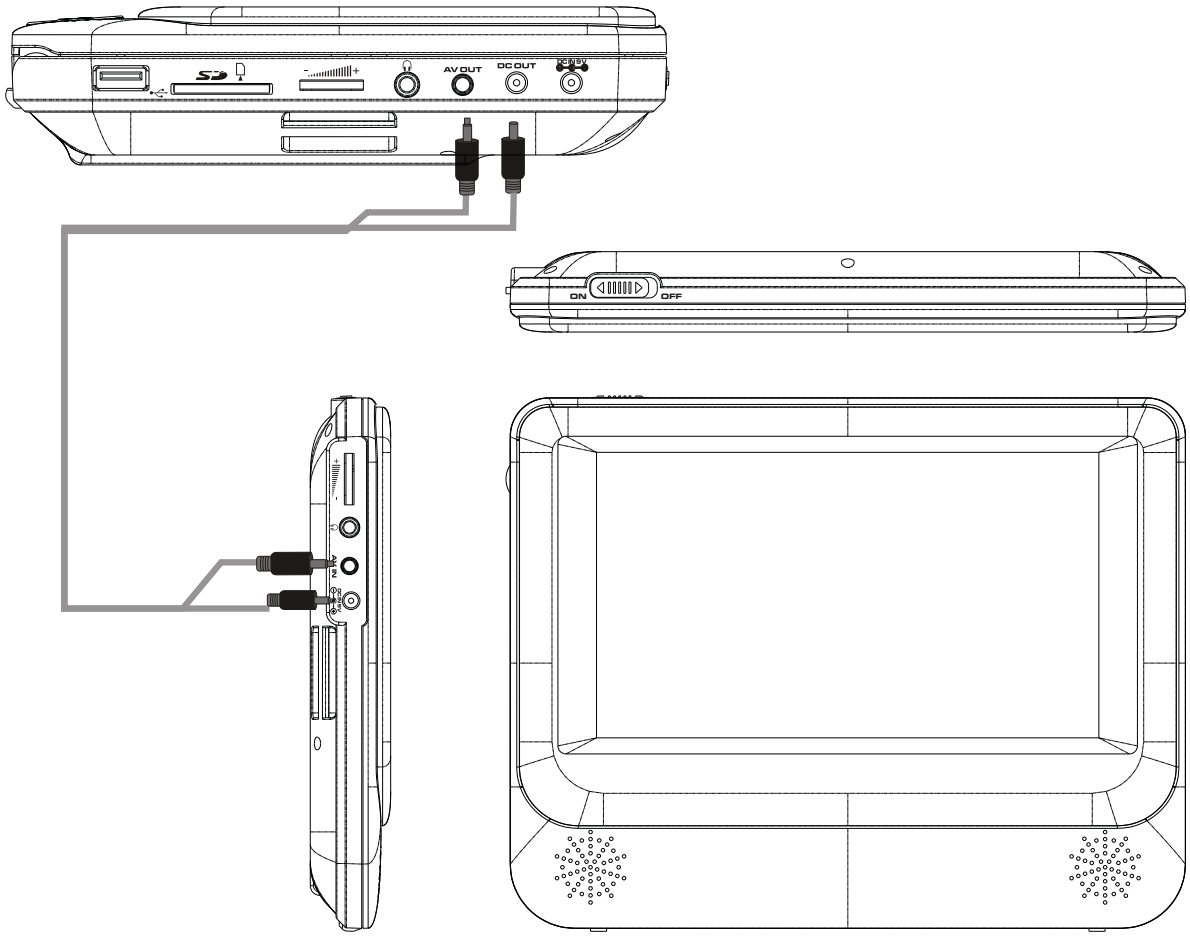

Note: The Slave screen is designed to run off power from the car charger only. The AC/DC wall adapter is for charging the main screen only.

SYSTEM CONNECTION

Audio and Video Signal Output

The Main Unit can transmit audio and video signals to the external receiver, such as a TV or an amplifier.

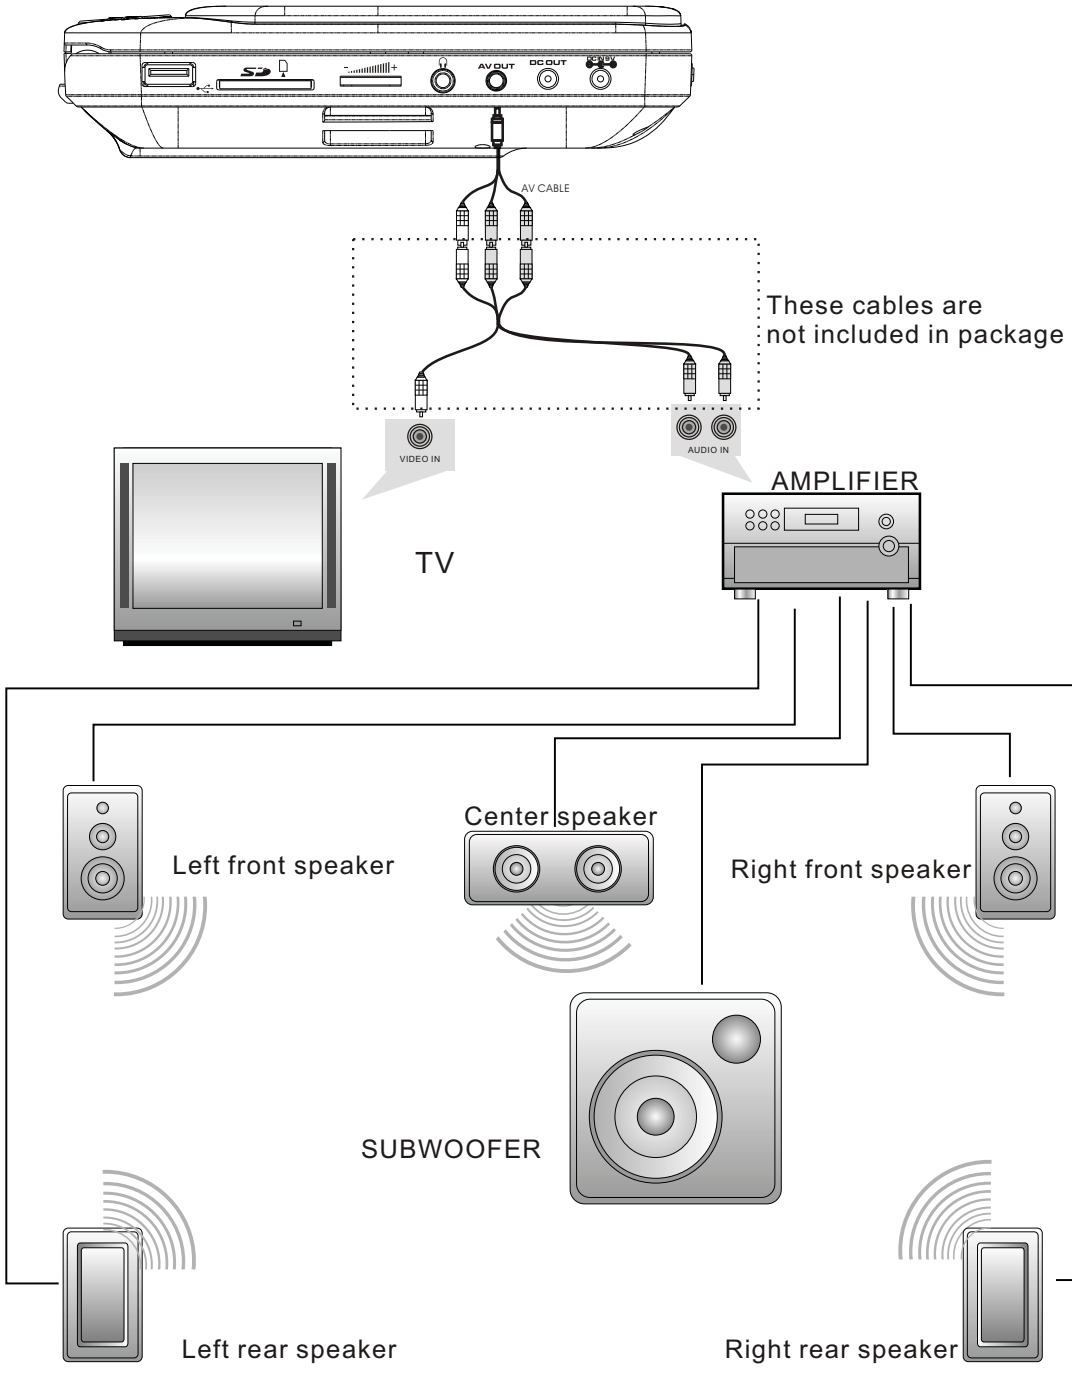

Notice: There is no 5.1 channel in the unit, however, after connecting to APM it is available to output audio in 5.1 channel

1. Refer the owner's manual of the external receiver as well。
2. Make sure all necessary connections have been properly made before connect the power.
3. If the player will not be used for a long period of time, disconnect the power and remove the battery from the remote control

REMOTE CONTROL

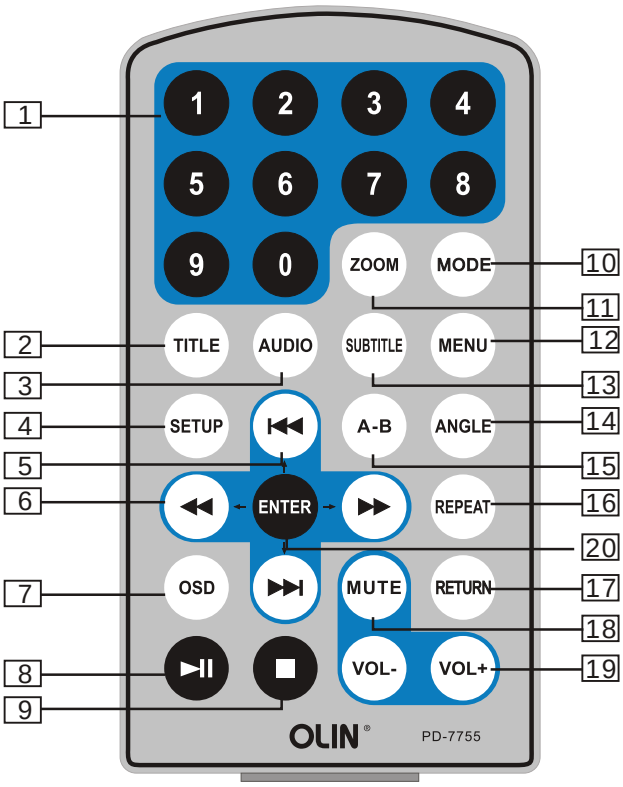

1. Numeric buttons

2. TITLE (To display title information)

3. AUDIO (To select audio language)

4. SETUP (To go to or exit setup menu)

5. Previous/Next button (To go to previous/next chapter or scene during playing)

6. Fast forward/backward button (To scan forward/backward at 2, 4, 8, 16, or 32 times)

7. OSD (To display disc information during playing ,such as elapsed and remaining time)

8. Play/Pause

9. Stop (press once to stop playback, then press ⏯ to resume playback from the point where you stopped; press stop button twice to stop playback completely)

10. MODE (To select the source)

11. ZOOM(To zoom in/out the image during the playback)

12. Menu (To enter or exit menu root)

13. Subtitle (To select subtitle language when playing DVD disc)

14. Angle (To change viewing angle when playing disc with multi-angle)

15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing)

16. Repeat (To repeat playing title, chapter or track)

17. Return (To return to the main menu)

18. MUTE(To turn to mute)

19. VOL +/- (To adjust the volume)

20: Enter (To confirm)

REMOTE CONTROL

The Use of Remote Control

Please put the battery into the remote control as per below illustration

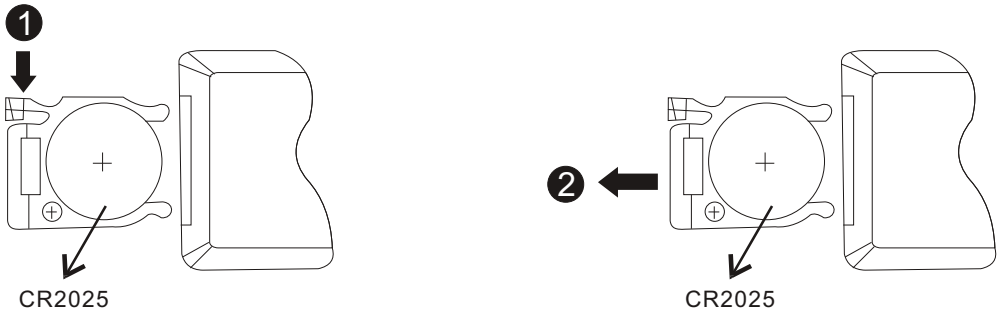

When using remote control, make sure the infrared window is pointed to infrared receiving window of the main unit. The distance between machine and remote control must be within 3 metres. Please refer to the following illustration

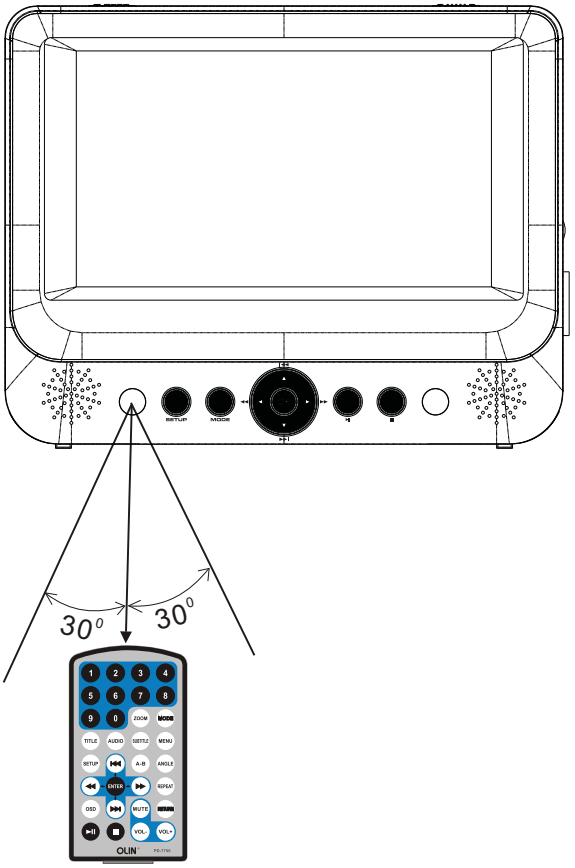

Notice

Warning: Keep the battery from children.

1. Avoid placing the unit in a damp environment or where there is a risk it may fall.
2. Avoid placing the unit in an area where the infrared remote receiving window is in direct sunlight.
3. Please use a new battery to replace old one if the remote control doesn't work.
4. Remove the battery from the remote if it will not be used for a long period of time.

BASIC OPERATION

DVD SVCD VCD CD MP3

Playing disc of DVD, SVCD, VCD, CD, Mp3,

1. After connecting power to the Main Unit, turn on the unit by sliding the ON/OFF switch to ON, the source menu will be displayed on the screen:

DVD
MEDIA

Press ⏮ ⏭ to enter DVD mode or Media mode and press OK button to confirm. When selecting "Media", ensure to insert USB or SD/MMC card properly

2. Open the disc door and insert a disc into the door with the label side facing up.

3. Close the disc door. The unit will load the disc and start playing.

4. Press ■ once to stop playback; then press ⏯ to resume playback from the point where you stoped; press ■ twice to stop playback completely .

5. During playback, press ⏯ to pause; press it again to resume playback.

6. When the playing is finished, please turn off the power by sliding ON/OFF switch to OFF.

7. For some DVD disc with Title or Chapter menu, press " MENU" button to enter menu page, and use cursor buttons to select. Press ENTER to confirm.

Note: Please do not disconnect USB devices or plug out SD/MMC cards while they are working with the unit. Functional failure may occur in case of wrong operations.

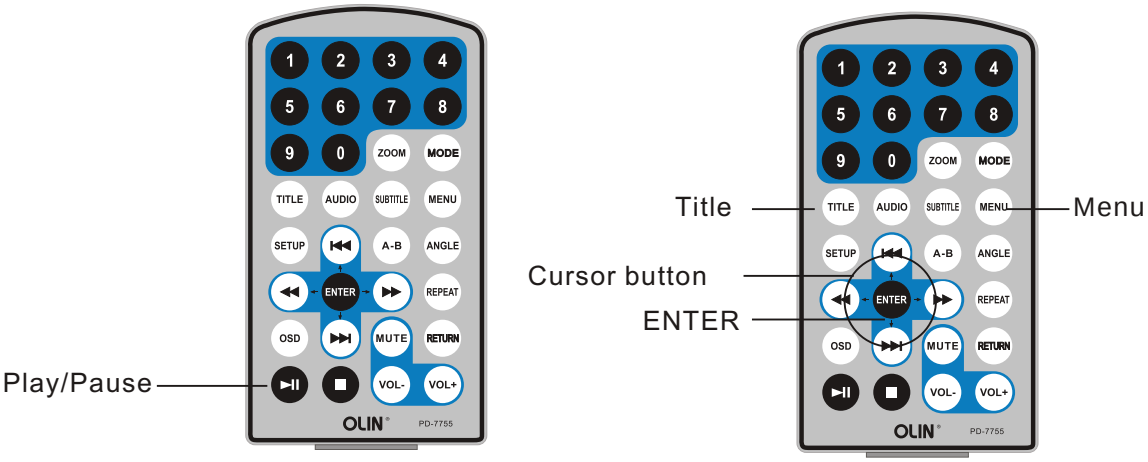

BASIC OPERATION

Fast forward and fast backward

DVD SVCD VCD CD

When playing disc of DVD, SVCD, VCD, CD, the unit can search forward or backward.

1. Press ▶▶, the unit will search forward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

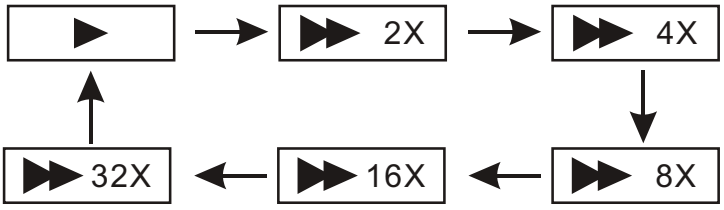

2. Press ◀◀, the unit will search backward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

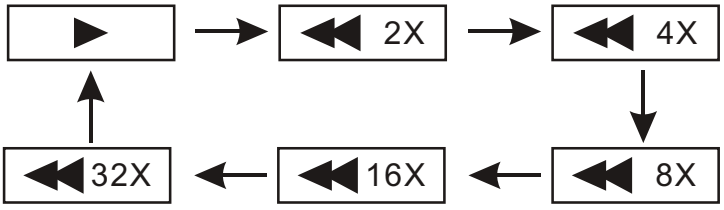

Note: Audio will be muted during fast forward and fast backward.

Repeat playing

DVD MP3 SVCD VCD CD

When playing disc of DVD, SVCD, VCD, CD, user can repeat playing one chapter, title or all the whole disc.

For DVD disc, press "repeat" button, user can repeat playing one Chapter; press it again to repeat playing Title; press it the third time to repeat playing the whole disc.



For MP3 disc, press "repeat" to repeat playing present file; press it again to repeat playing the folder; press it the third time to cancel repeat playing.



BASIC OPERATION

Repeat playing of favorite scene

DVD SVCD VCD CD MP3

When playing disc of DVD, SVCD, VCD, CD, Mp3, user can repeatedly play a specific section.
During playback, press "A-B" button at a point A, then press this button again in point B, the unit will automatically repeat playing the part between A-B

Press it the third time, the unit will return to normal playback.



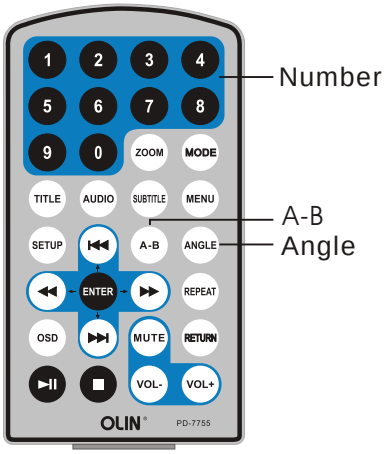

Angle

During playing DVD disc with multi-angle, press "Angle" button, the followings will be displayed on screen:

Press number buttons to select the angle you desire

To return to normal playing, please press "Angle" .
The unit will play the disc in the default angle.

Notice

The function is available only for discs with multi-angle.

REMOTE CONTROL

Zoom In/ Out

DVD SVCD VCD

During playback, press "Zoom " button, the image will be enlarged; press it again the image will be enlarged again; press it fourth time, the image will zoom out, press it repeatedly and the image will return to normal status.

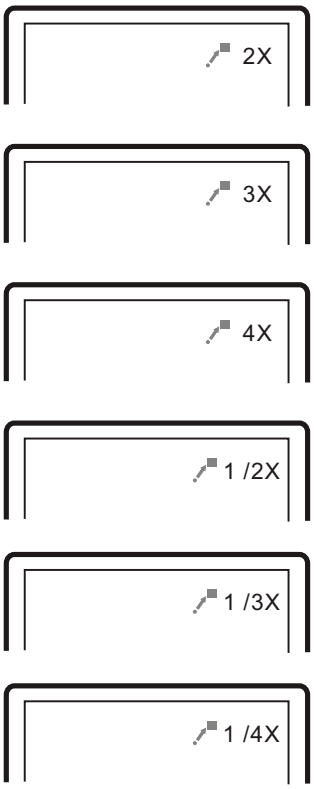

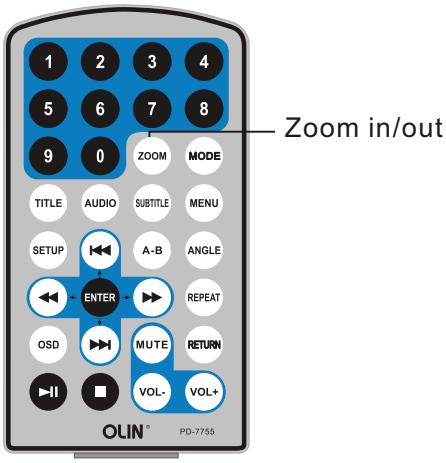

When the magnification level is greater than 1X, use the Navigation buttons to pan around the magnified picture.

Note: The picture quality may decrease as the zoom level (magnification) increase.

PLAYING JPG /MP3 FILE

Playing JPG file

1. Place a JPG disc into the tray, the unit will start reading and play.
2. Press "MENU" to browse JPG files.
3. Press ▲▼ to select a JPG file and press " OK " button to confirm.
   Note: you can press MENU to return to the folder list. Press ▶II or " OK " to preview the file selected
4. To rotate the picture counter-clockwise, press "◀"; Press "▶" to rotate the picture clockwise
5. Press OSD button when viewing pictures, you can select different refresh mode as follows:

①. wipe top: from top to bottom
②. wipe bottom: from bottom to top
③. wipe left: from left side to right side
④. wipe right: from right side to left side
⑤. digonal wipe left top: from left top to right bottom
⑥. digonal wipe right top: from right top to left bottom
⑦. digonal wipe left bottom: from left bottom to right top
⑧. digonal wipe right bottom: from right bottom to left top
⑨. extend from center H: from horizontal center to both sides
⑩. extend from center V: from vertical center to both sides
⑪. compress to center H: from top and bottom to center.
⑫. compress to center V: from right and left to center.
⑬. window H: from four window's top side to bottom side.
⑭. window V: from four window's left side to right side.
⑮. wipe from edge to center: from 4 edges to center.

6. During viewing files, "⊘" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
7. When viewing JPG files, press " ■ " , pictures will be displayed in thumbnail mode, press ▲▼◀▶ or "OK" button to select one picture to view

Playing MP3 files

1.Place MP3 disc into the disc door or insert USB disk, SD card to USB port or SD card slot. Press " ▲/▼ " or "OK" button to choose a MP3 file; Press "▶II" or " OK " button to play the file selected.

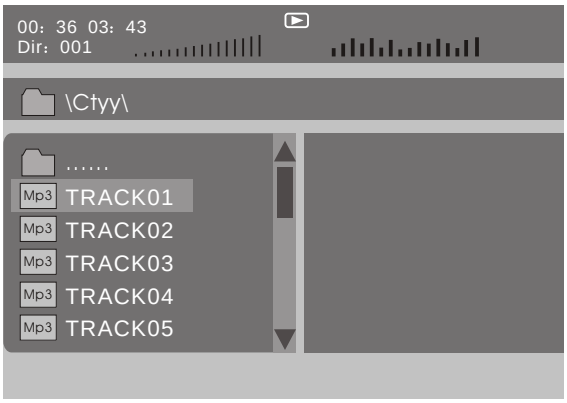

SYSTEM SETUP

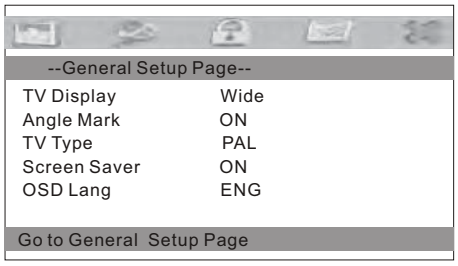

Press"Setup"button,the main menu willbe displayed on the screen In the GeneralSetup Page, Press◄► buttonto highlight this item.
Press OK button toaccess.
Press ◄ button to exit.
Press SETUP to goback to normal playback.

General Setup Page

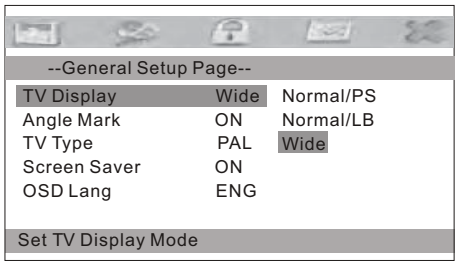

TV display:
Enter this option,user canset screen display format (Nomal/PS,Nomal/LB,Wide)
The default is "Wide"
Note:
☆ The function depends onthe display ratio withwhich the DVD disc is recorded.
☆Please choose "Wide(16:9)"when using a16:9 widescreen TV set

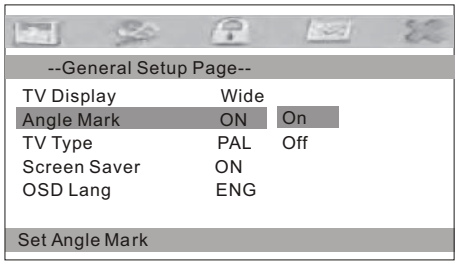

Angle Mark:
Enter this option toset angle mark duringplayback.
Optional setting: ON, OFF
The default is: ON

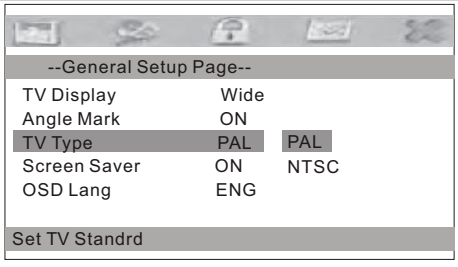

TV Type:
Enter this option toselect DVD video outsignal type. Set this to correspond with yourTV's Video Systemtype. PALis the standard used inAustralia.
The default is PAL.

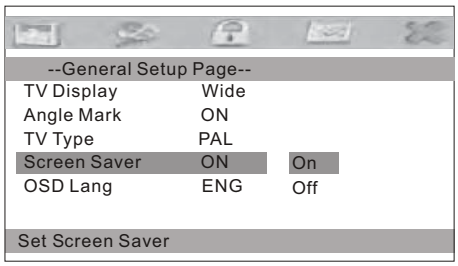

Screen Saver:
Enter this option toactive/turnoff the screen saverfunction. The screensaver prevents burnin damage to theplayer's screen.
The default is ON.

SYSTEM SETUP

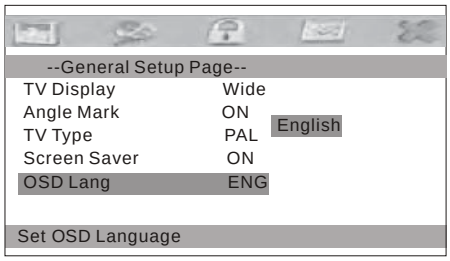

OSD Language:
In the option usercan set OSD menulanguage English.
The default:English

Video Setup Page

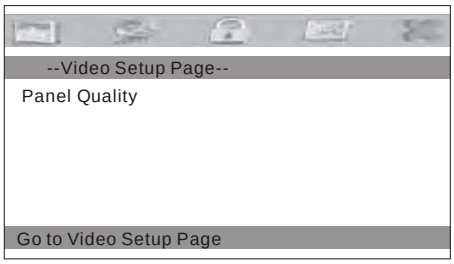

Enter this option, usercan adjust picture qualityof video output. There are itemsavailable to be adjusted: Brightness, Contrast, Hue andSaturation.
For all these itemsthe default is 00

Password Setup Page

The factory set passwordis"8888",please remember the renewed password. In caseof forgetting it, pleasepress default password"8888"

Preference Page

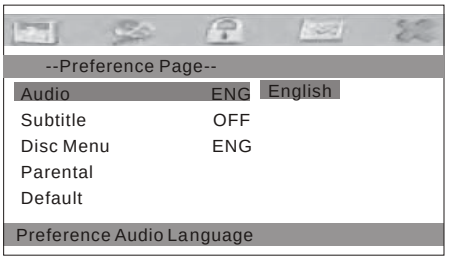

Audio:
Enter this option, usercan select your preferredaudio language for DVDs.
The default is English。
Note：
☆ The audio language dependson the material oneach disc.
☆ User can also changethe audio language duringplayback by pressing theAudio button.

SYSTEM SETUP

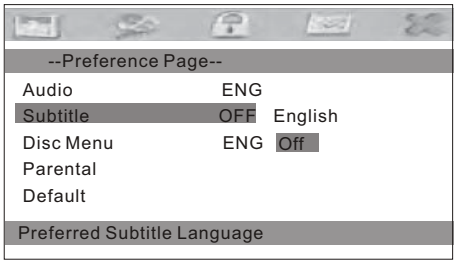

Subtitle:
Select your preferred language to show the subtitles on the screen.
The default is OFF
The subtitle languages depend on the information available on each disc, You can also change the subtitle language during playback by press the SUBTITLE button.

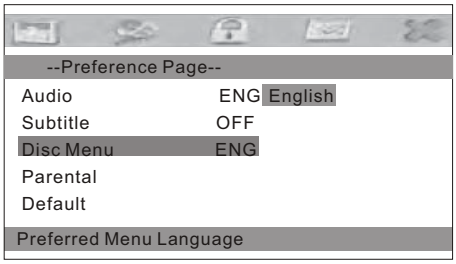

Disc Menu:
This function allows you to choose the menu language stored on the disc.
The default is English.
Note: the disc menu languages depend on the information available on the disc.

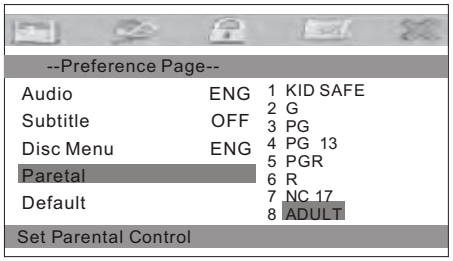

Parental:
Enter this option to set the parental control level to some unsuitable disc scenes being watched by the children.
Optional parental control levels: KID SAFE, G, PG, PG 13, PGR R, Nc17, ADULT.

The default of this option is ADULT.

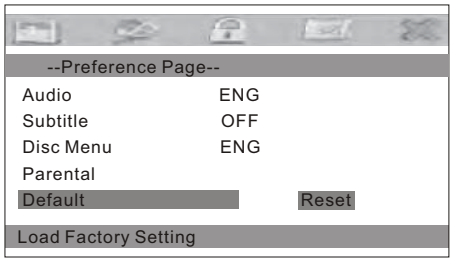

Default:
Set all settings to factory default state.
Note: The Parental level setting will not be reset by this operation.

SPECIFICATION

Power Supply	DC 9-12V
Power Consumption	≤ 10W
Signal System	PAL/NTSC
Video Output	1 Vp-p/ 75ohm, unbalanced, 3.5mm mini Jack *1
Audio Output	1.4Vrms / 10Kohm, 3.5mm mini Jack *1
Headphone Terminal	3.5mm stereo minijack *1
Frequency Response	20 Hz - 20KHz
Signal/Noise(Audio)	≥ 80dB
Dynamic Range	≥ 85dB
Panel Size	7 inch (16:9)
Laser Wavelength	650nm/ 795nm
Operating Conditions	Temperature: 0~40°C Status: Horizontal
Rechargeable Battery	Lithium Polymer
Dimensions	Main Unit:212x167x40mm Slave screen:212x166.5x25mm
Weight	Main Unit: 0.7kg Slave screen:0.36kg
Support device	SD/MMC/Full Speed USB2.0
Device capacity	Up to 8GB SD/8GB MMC/8GB USB
Remark	This model is compatible with 9~12V vehicles

BATTERY

Rechargeable Battery Use

The unit utilizes long-life Li polymer battery for portable power supply. The battery has no "Memory Effect" and thus can be recharged safely regardless of whether the battery is fully or partially discharged. It's enough to recharge no longer than 6H each time, fully recharged battery can last about 2 hours.
The unit will access to Standby mode automatically when the battery is low.
If the battery does not work to your expectation, please consult the service centre. Do not attempt to replace or repair the battery by yourself unless you are qualified service personnel.

Please note:
Battery will not be chareged during playback. This is designed to prolong the battery life and protect it from being overcharged.

Precautions related to Battery Recharge

The battery can be only recharged when turning power to OFF state, and keep continuous power supply, the red light will be on, and the light will turn Green when it's fully charged.

Using and maintaining rechargeable battery supply

1. The normal working temperature is: 0°C ~40°C ;
2. Always unplug AC/DC power supply for the unit when not in use;
3. It is normal for the unit to produce heat during playback, however, the unit should not be used for extended periods or left unattended.
4. Avoid having the unit collide with any objects, and place away from all possible heat sources or damp areas.

MOUNTING BAG

Using the Mounting Bag

The mounting bag is to be used to to hold the player in a viewing position when drive a vehicle.

The bag has lock straps that could wrap around the headrest tightly with the player securely rest inside.

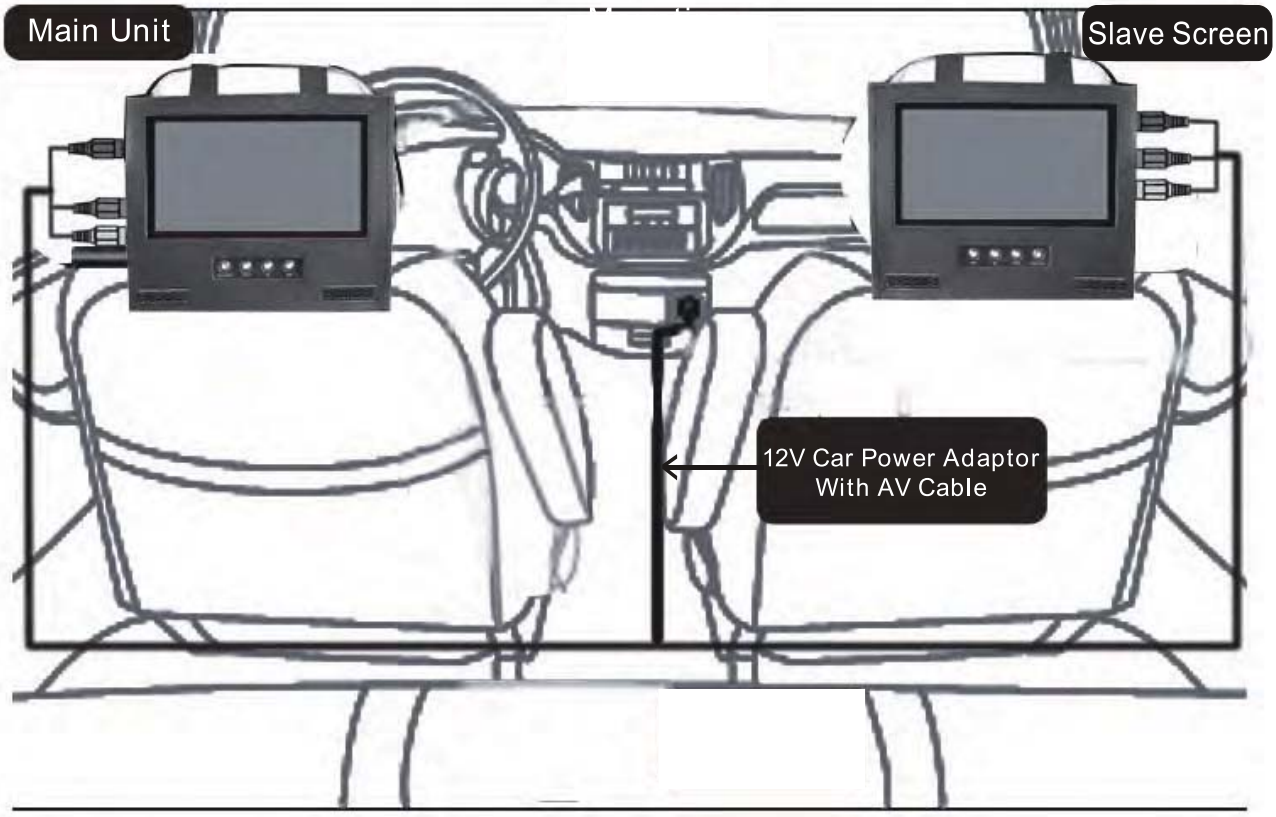

SAFETY WARNING!

On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving.

If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted.

All passengers should wear seat belts when using this unit in a moving vehicle.

If in doubt, please contact your vehicle manufacturer for further advice.

Using other car power adaptors could damage the unit.

TROUBLESHOOTING

There is no power to the device.

Ensure that the Power Switch on the main unit is physically set to the ON position.

Ensure that the AC adapter cord is securely connected to the player and the proper wall outlet.

The device will not play the disc.

Ensure that a supported disc is loaded in the player label-side up.

Ensure that the disc s rating level does not exceed the player s parental rating level.

Ensure that the disc is not damaged or too dirty.

Clean the disc or try another disc.Moisture may have condensed inside the player. Remove the disc and leave the player on for 1-2 hours and then try again.

There is no picture.

Ensure that the TV set has been powered on and is set to the correct AV mode.

Ensure that the connections between the player and the TV are secure and correct.

Check if the connection cables are damaged.

The picture is noisy or distorted.

The disc may be damaged or dirty. Clean the disc or try another one.

Reset your TV s color system.

Ensure that the player is connected directly to the TV (and not through a VCR, cable box, satellite receiver, etc.)

The picture is not full-screen.

Change the aspect ratio setting of your player from the Setup menu.

Select a different aspect ratio option from the DVD disc menu.

There is no sound or distorted sound.

Ensure that the TV and amplifier have been turned on and properly set up.

Ensure that the TV and amplifier connections are secure and correct.

Try a different Audio track of the DVD by pressing AUDIO.

Ensure that the MUTE function of the TV, Amplifier, or Player is not engaged.

The remote control doesn t work.

Ensure that the Power Switch has been physically set to the ON position.

Ensure that there are no obstacles between the remote and the player.

Point the remote at the remote sensor on the main unit.

Ensure that the batteries in the remote retain a charge and have been installed correctly.

Try replacing the remote s batteries.

The player has malfunctioned.

Unplug the player. After 30 minutes, plug in and power on the player -- the restore function should reset the player.

The icon ⊘ appears on screen

Ensure there is no restriction on the disc's software
Ensure the feature is supported by the disc
Ensure the feature is available at the moment
Ensure requested ttitle or chapter is not out of range

The player can notadvance through a movie

You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.

No forward or backwardscan

Some discs have sections that prohibit rapid scanning or chapter skip;
If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to.
This part of the movie is often programmed to prohibit skipping through it.

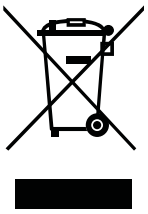

If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic equipment Directive)

Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

Copyright

This manual contains information protected by copyright law.
No part of this document may be used or reproduced in any form or by any means, or stored in a database/retrieval system without prior written permission from us.

The information of this manual is based on the current version of the product.
We reserve the right to alter the content without prior notice.

All brand names in this manual are the property of their respective owners.

Need some help?

Call our toll free Customer Helpline today!

FREE CALL | **Customer Helpline** 1800 656 630

Or visit our website

www.olinlivenow.com.au

WESTWELL
CONNECTING EAST TO WEST

Westwell Australia Pty Ltd

Westwell and its stylised logo are registered with the Australian IP office.
OLIN is a registered trademark of Westwell Australia Pty Ltd.
All rights reserved.
All promotional materials offered for reference only.
Actual may vary.